


DM11S Demopick

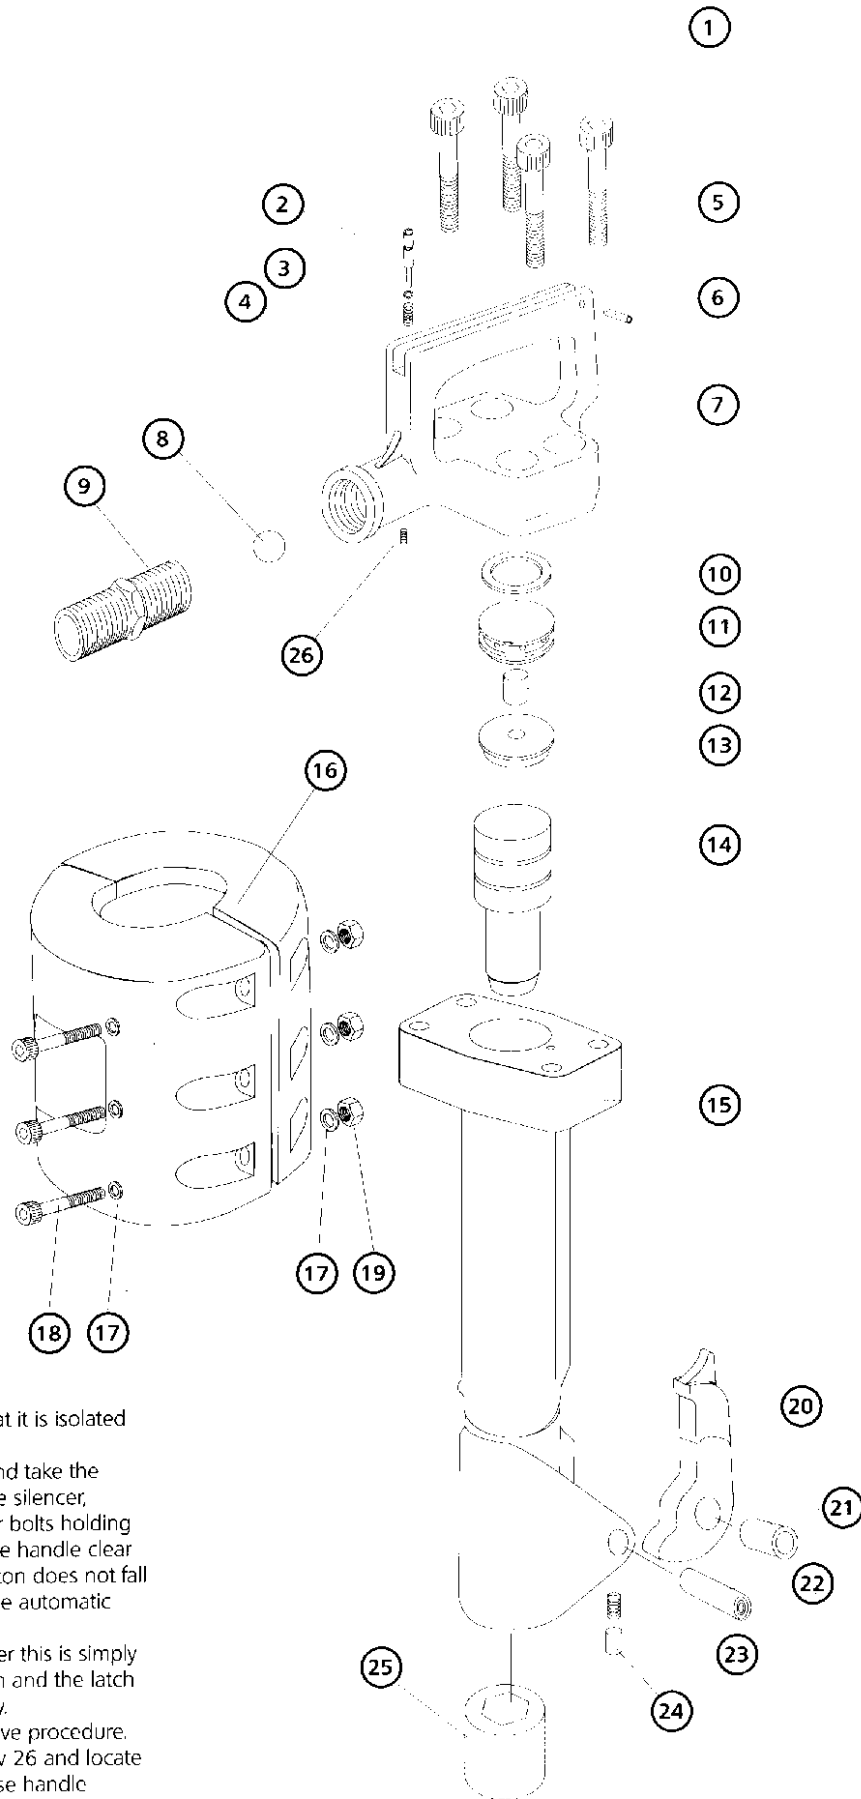

Dismantling

To dismantle the tool first ensure that it is isolated from the air hose.

Grip the handle securely in a vice and take the three screws and locknuts out of the silencer, remove the silencer. Loosen the four bolts holding the cylinder to the handle and lift the handle clear of the cylinder ensuring that the piston does not fall out on the floor. Carefully remove the automatic valve mechanism from the handle.

If it is necessary to remove the trigger this is simply achieved by driving out the pivot pin and the latch retainer is removed in the same way.

Assembly is the opposite of the above procedure. To reverse the handle, remove screw 26 and locate in alternative screw hole, then reverse handle through 180 degrees.



DM11S Demopick

Item	Part No.	Description	Qty per tool	
O 1	162007	Throttle Lever	1	
R 2	162009	Throttle Valve Pin	1	
R 3	001006	Throttle Valve Stem Seal	1	
R 4	162010	Throttle Spring	1	
O 5	162011	Capscrew	4	
R 6	162008	Throttle Lever Pin	1	
	7	162001	Handle	1
R 8	023014	Throttle Valve Ball	1	
	9	901010	Nipple Connection	1
O 10	153022	Preload Pad	1	
O 11	162004	Valve Block	1	
O 12	162006	Valve	1	
O 13	162005	Valve Seat	1	
O 14	156008	Piston	1	
	15	162002	Cylinder	1
O 16	162012	Silencer	1	
O 17	029013	Washer	6	
O 18	910101	Silencer Screw	3	
O 19	029009	Locknut	3	
O 20	162003	Latch Retainer	1	
R 21	153004	Latch Bushing	1	
R 22	203037	Retaining Pin	1	
R 23	153018	Latch Retainer Spring	1	
R 24	153021	Latch Plunger	1	
O 25	153002	Chuck bushing	1	
	26	162014	Kickport Screw	1

R = Recommended Spares (in stock)
 O = Occasional Spares (order as required)